



Aluminum Frame



set of magnetic bars



Halogen Lights



1. remove frame and graphics from the case. lights are stored in lid.




2. pull display into upright position.



3. locking



4. starting with bottom hubs, attach panel bars into position. panel bars should touch each other on hub.

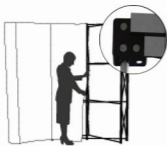

5. Attach panels with top stiffeners PVC onto magnets. align magnets edge down center of panel bars from top to bottom.



6. To install end cap panels, attach top stiffeners to front and back panel magnets. using both hands, guide panel downwards onto bars.



7. Attach lights to top of frame by sliding X blocks under the frames cross sections.